



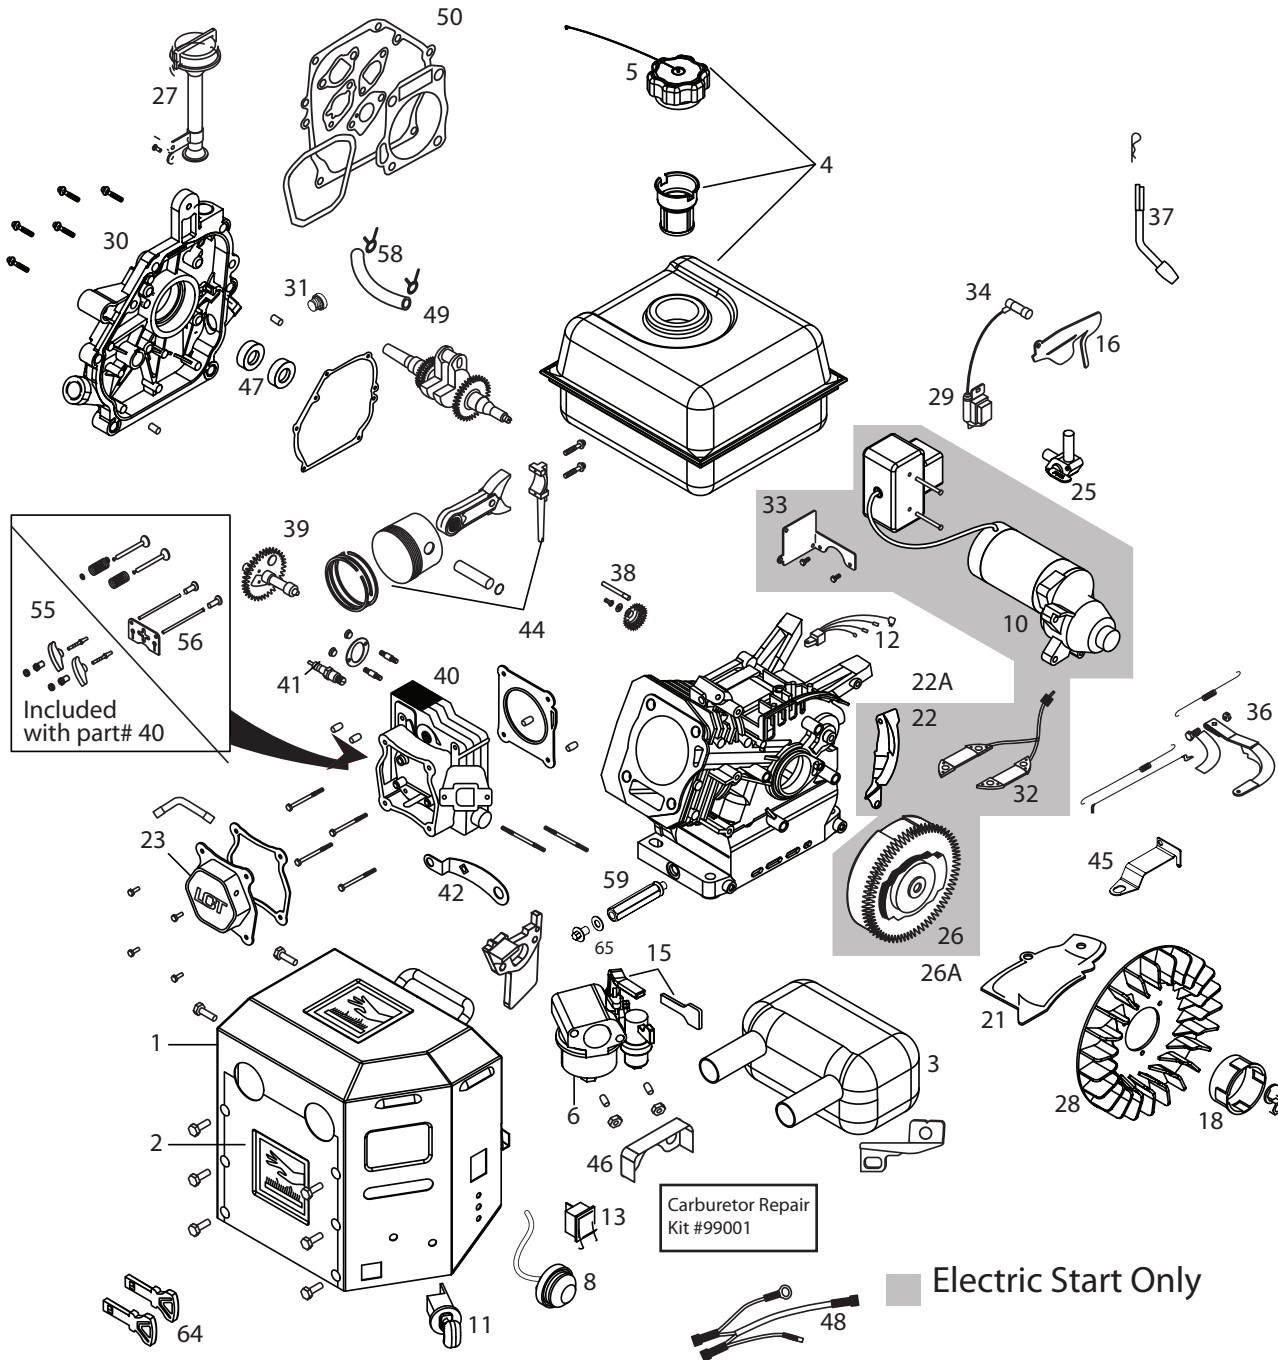

Lauson Part No.			LCT Ref. No.	Lauson Part No.			LCT Ref. No.
1	Heater Box Assy	01001	SKSN0100.1	25	Fuel Petcock	20822211	SK2082221.1
2	Shield, Heater Box	01011	SKSN0101.1	26	Electric Start Flywheel Assy (If Equipped)	04051	SKSN0405.1
3	Snow Muffler Assy	02001	SKSN0200.1	26A	Manual Start Flywheel Assy (If Equipped)	20817001	SK2081700.1
4	Snow Fuel Tank Assy	03001	SKSN0300.1		27	High Oil Fill Tube Assy	20837011
5	Oversized Fuel Tank Cap (Click Style)	03011	SKSN0301.1	28	Flywheel Fan	20840001	SK2084000.1
6	Snow Carburetor Assy	03021	SKSN0302.1	29	Ignition Coil Assy	20825003	SK2082500.3
8	Fuel Primer Bulb With Hose	03041	SKSN0304.1	30	Crankcase Cover Assy	20836001	SK2083600.1
10	Electric Starter Assy (If Equipped)	04002	SKSN0400.2	31	Non Removable Plug	20837051	SK2083705.1
11	Key Switch Assy	04011	SKSN0401.1	32	Charging Coil DC (If Equipped)	07701	SKSN0770.1
12	CDI Box	04041	SKSN0404.1	33	Electric Starter Bracket (If Equipped)	06061	SKSN0606.1
13	Run/Stop Switch	04031	SKSN0403.1	34	Spark Plug Boot	20838001	SK2083800.1
15	Choke Lever/Choke Handle (Red)	05001	SKSN0500.1	36	Governor Arm Assy	20830001	SK2083000.1
16	Governor Linkage Shield Plate	05011	SKSN0501.1	37	Governor Shaft	20831001	SK2083100.1
17	Snow Recoil Starter Assy (Hex Style-Black)	06001	SKSN0600.1	38	Governor Gear Assy	20829001	SK2082900.1
18	Starter Cup Small	06011	SKSN0601.1	39	Camshaft	20816001	SK2081600.1
19	Snow Starter Grip	06031	SKSN0603.1	40	Cylinder Head Assy	20810001	SK2081000.1
20	Blower Housing Assembly Electric Start - Snow (Black) (If Equipped)	06021	SKSN0602.1	41	Spark Plug	20838101	SK2083810.1
20A	Blower Housing Assembly Manual Start - Snow (Black) (If Equipped)	06121	SKSN0612.1	42	CDI Box Bracket	04021	SKSN0402.1
				44	Piston And Rod Assy	20814001	SK2081400.1
				45	Speed Control Brkt	01501	SKSN0150.1
				46	Vapor Shield	01551	SKSN0155.1
21	Shield, Cylinder	06081	SKSN0608.1	47	Seal Kit	20839001	SK2083900.1
22	Shield, Flywheel - Electric Start (If Equipped)	06051	SKSN0605.1	48	Wire Harness	01601	SKSN0160.1
22A	Shield, Flywheel - Manual Start (If Equipped)	06071	SKSN0607.1	49	Crankshaft	20818001	SK2081800.1
				50	Gasket Kit	20843001	SK2084300.1
23	Valve Cover	20845001	SK2084500.1	55	Rocker Arm Kit	20811001	SK2081100.1
				56	Push Rod Kit	20810011	SK2081001.1
				58	Fuel Hose Kit	20860001	SK2086000.1
				59	Extended Oil Drain Tube	07001	SKSN0700.1
				64	Red Key Set (2)	04071	SKSN0407.1
				65	Oil Drain Plug Kit	20899111	SK2089911.1

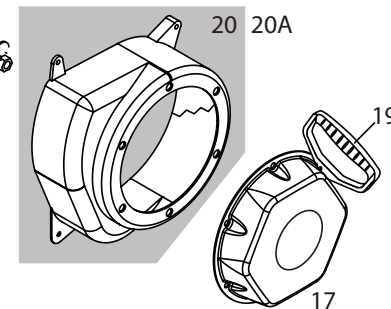

Electric Start Only